



ASSEMBLY GUIDE:

BMP pilot torso slides into backboard, may be secured with adhesive or bolts/nuts (note: drilling the torso will void warranty). To mount using bolts/nuts, use the torso template below to drill corresponding holes, or insert torso into backboard, visually align, and drill corresponding holes, use nuts/bolts to secure in place.

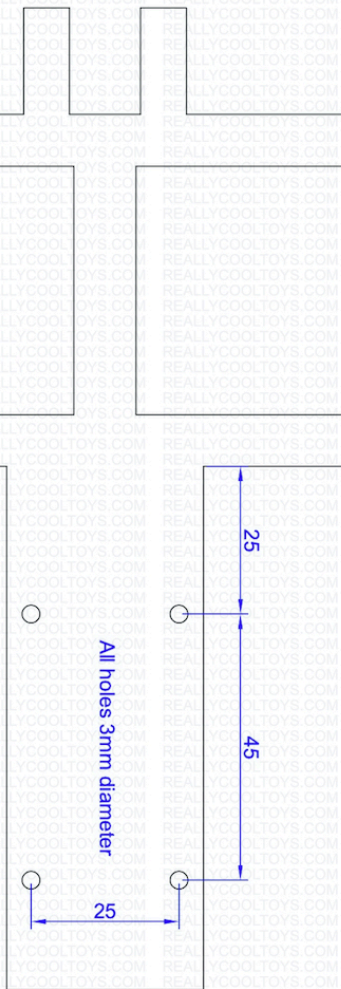

Torso hole dimensions for mounting to backboard

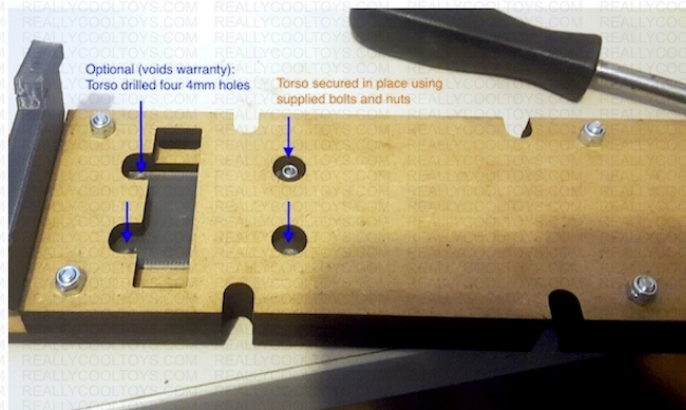

To attach servo horn to pilot upper arm:

- 1) insert servo screw through upper arm hole (use an appropriate length screw - generally 12mm +/-2mm long depending on servo selection)
- 2) Center servo horn onto the inserted screw on the protruding side to keep servo horn in position while marking/drilling corresponding holes to attach servo to arm.
- 3) use servo supplied screws to secure horn to drilled arm holes

Note: Servo, servo horns, screws not included.



Control bar clamps are used to secure pilot hand position onto control bar.

To install:

- 1) Slide one clamp on each side (on the out-side of pilot hands)
- 2) Tighten clamp screws to secure pilot hands in position

Note: Over-tightening clamp screws may cause damage to control bar.

